

This document lists the compatible batteries with all GoodWe storage inverters, consisting in 3 system types:

- 1) Low-voltage energy storage systems
- 2) High-voltage energy storage systems
- 3) Commercial and industrial energy storage systems

Only batteries listed in this document are approved for connection to GoodWe storage inverters according to GoodWe Limited Warranty.

### 1) Low-voltage Energy Storage Systems

Battery	Battery	Battery	Inverter Series						
Brand	Series	Model	ES	EM	SBP	ES G2	SBP G2		
	SECU-A	SECU-A5.4L	•	•	•	•	•		
GOODWE	Lynx Home U*1	LX U5.4-L	•	•	•	•	•		
GOODWE	Lynx Home U-20*2	LX U5.4-20	•	•	•	•	•		
	Lynx Home A*3	LX A5.0-10				•	•		

- \*1. ARM firmware versions 11 and above are required for compatibility.
  \*2. ARM firmware versions 11 and above are required for compatibility.

### ES G2/SBP G2:

- \*2. ARM firmware versions 02 and above are required for compatibility.
  \*3. ARM firmware versions 07 and above are required for compatibility.

<b>Battery Brand</b>	Battery Series	Battery Model	ES	EM	SBP	ES G2	SBP G2
	Battery-Box Pro Series*1	-	•	•	•	•	•
	Battery-Box Res Series*1	-	•	•	•	•	•
BYD	Battery-Box LV Series*2	-	•	•	•	•	•
	Battery-Box Premium LVL*2	LVL 15.4	•	•	•	•	•
	Battery-Box Premium LVS Series*2	-	•	•	•	•	•

### ES/EM/SBP/BP:

- \*1. ARM firmware versions 00 and above are required for compatibility.
  \*2. ARM firmware versions 07 and above are required for compatibility.

<b>Battery Brand</b>	Battery Series	Battery Model	ES	EM	SBP	ES G2	SBP G2
1.0		RESU 3.3*1	•	•		•	•
		RESU 6.5*1	•	•	•	•	•
	RESU LV Series	RESU 10*1	•	•	•	•	•
LG		RESU 12*2	•	•	•	•	•
		RESU 13*2	•	•	•	•	•
		RESU 6.4 EX <sup>*1</sup>	•	•	•	•	•
EO/EN/ODD							

### ES/EM/SBP:

- \*1. ARM firmware versions 00 and above are required for compatibility.
  \*2. ARM firmware versions 07 and above are required for compatibility.

<b>Battery Brand</b>	Battery Series	Battery Model	ES	EM	SBP	ES G2	SBP G2
	US2000 Series*1	US2000	•	•	•	•	•
	US3000 Series*2	US3000	•	•	•	•	•
	US2000C Series*1	US2000C	•	•	•	•	•
PYLON	US3000C Series*2	US3000C	•	•	•	•	•
	Force L1 Series <sup>2</sup>	Force-L1	•	•	•	•	•
	Force L2 Series*2	Force-L2	•	•	•	•	•
	US5000 Series*3	US5000				•	•

- \*1. ARM firmware versions 00 and above are required for compatibility.
  \*2. ARM firmware versions 07 and above are required for compatibility.
- \*3. ARM firmware versions 00 and above are required for compatibility.

<b>Battery Brand</b>	Battery Series	Battery Model	ES	EM	SBP	ES G2	SBP G2
		DYNESS-LV x1	•	•	•		
	DYNESS-LV Series*1	DYNESS-LV x2	•	•	•		
	DTNESS-LV Selles	DYNESS-LV x3	•	•	•		
		DYNESS-LV x4	•	•	•		
	POWERBOX F Series 1	POWERBOX F-2.5	•	•	•		
DYNESS		POWERBOX F-5.0	•	•	•		
DINESS		POWERBOX F-7.5	•	•	•		
		POWERBOX F-10.0	•	•	•		
		DL5.0C × 1				•	•
	DYNESS-LV Series*2	DL5.0C × 2				•	•
	DINESS-LV Selles	DL5.0C × 3				•	•
		DL 5 0C × 4				•	•

### ES/EM/SBP/BP:

- \*1. ARM firmware versions 07 and above are required for compatibility.
- \*2. ARM firmware versions 06 and above are required for compatibility.



# 1) Low-voltage Energy Storage Systems

Battery	Battery	Battery	Inverter Series						
Brand	Series	Model	ES	EM	SBP				
	LBS051100A Series <sup>*1</sup>	LBS051100A-A02	•						
OLOID		LBS051100A-A03	•						
OLOID	LBS051200A Series <sup>*1</sup>	LBS051200A-A02	•						
	LDSUSTZUUA Series	LBS051200A-A03	•						

ES:
\*1. ARM firmware versions 12 and above are required for compatibility.

Battery Brand	<b>Battery Series</b>	Battery Model	ES	EM	SBP
		Soluna 4K Pack	•	•	•
Soluna	LV(48V) Battery Series	Soluna 5K Pack	•	•	•
		Soluna EOS 5K Pack	•	•	•
Battery Brand	Battery Series	Battery Model	ES	ЕМ	SBP
	Smile5-BAT Series	SMILE5-BAT*2	•	•	•
		Smile-BAT-10.1P <sup>*2</sup>	•	•	•
A L DU LA *1	Smile-BAT Series	Smile-BAT-10.3P*2	•	•	•
ALPHA <sup>*1</sup>		Smile-BAT-13.3P*3	•	•	•
	M48112-P Series	M48112-P*3	•	•	•
	M48100-P Series	M48100-P*3	•	•	•

## ES/EM/SBP/BP:

- \*1. CAN communication line sequence of ALPHA-ESS battery does not match GoodWe inverters. A matching solution provided by ALPHA-ESS is required.
- \*2. ARM firmware versions 10 and above are required for compatibility.
  \*3. ARM firmware versions 11 and above are required for compatibility.

Battery Brand	<b>Battery Series</b>	Battery Model	ES	EM	SBP
		Firefly-3.6K	•	•	•
		Firefly-7.2K	•	•	•
	Firefly Series <sup>*1</sup>	Firefly-10.8K	•	•	•
Tecloman		Firefly-14.4K	•	•	•
		Firefly-18.0K	•	•	•
		Firefly-21.6K	•	•	•
		Firefly-25.2K	•	•	•

\*1. ARM firmware versions 12 and above are required for compatibility.

Battery Brand	Battery Series	Battery Model	ES	EM	SBP
UZENERGY	L051100-A Series	L051100-A <sup>*1</sup>	•	•	•

\*1. ARM firmware versions 12 and above are required for compatibility.



## 2) High-voltage Energy Storage Systems

Battery	Battery	Battery			Inverter Series				
Brand	Series	Model	ET (5-10kW)*	EH	ВТ	вн	ЕНВ	ET (15-30kW)	ET-20
		LX F6.6-H	•	•	•	•	•	•	•
	Lynx Home F <sup>*1</sup>	LX F9.8-H	•	•	•	•	•	•	•
	Lynx Home F PLUS+*2	LX F13.1-H	•	•	•	•	•	•	•
		LX F16.4-H	•		•			•	•
		LX F9.6-H-P20	•	•	•	•	•		•
GOODWE		LX F12.8-H-P20	•	•	•	•	•	•	•
GOODWE		LX F16.0-H-P20	•	•	•	•	•	•	•
	Lynx Home F G2*3	LX F19.2-H-P20	•	•	•	•	•	•	•
		LX F22.4-H-P20	•		•			•	•
		LX F25.6-H-P20	•		•			•	•
		LX F28.8-H-P20						•	•
	Lynx Home D	LXD5.0-10							•

<sup>\*.</sup> Including ET Series: ET PLUS+, ET PLUS+ (16A)

### ET/EH/BT/BH/EHB:

- \*1. ARM firmware versions 19 and above are required for compatibility.
- \*2. ARM firmware versions 23 and above are required for compatibility.
- \*3. For compatibility, the ET/BT series requires ARM25 and DSP09 versions and above; the EHB series requires ARM25 and DSP version 03 and above; the EH/BH series requires ARM25 and DSP version 07 and above.

### ET (15-30KW)/ET-20:

\*3. For compatibility, the ET (15~30K) Series requires ARM07 and DSP version 06 and above.

Battery Brand	Battery Series	<b>Battery Model</b>	ET (5-10kW)*	EH	ВТ	ВН	EHB	ET (15-30kW)	ET-20
	Battery-Box HV Series*1	-	•	•	•	•			
		HVM 8.3		•		•	•		
		HVM 11.0	•	•	•	•	•	•	•
	Battery-Box Premium HVM <sup>-2</sup>	HVM 13.8	•	•	•	•	•	•	•
BYD		HVM 16.6	•	•	•	•	•	•	•
טוט		HVM 19.3	•	•	•	•	•	•	•
		HVM 22.1	•	•	•	•	•	•	•
		HVS 5.1	•	•	•	•	•	•	•
Ва	Battery-Box Premium	HVS 7.7	•	•	•	•	•	•	•
	HVS <sup>*2</sup>	HVS 10.2	•	•	•	•	•	•	•
		HVS 12.8	•		•			•	•

<sup>\*.</sup> Including ET Series: ET PLUS+, ET PLUS+ (16A)

### ET/EH/BT/BH/EHB:

- \*1. ARM firmware versions 07 and above are required for compatibility.
- \*2. ARM firmware versions 11 and above are required for compatibility.

### ET15~30K:

- \*2. ARM firmware versions 02 and above are required for compatibility.
  - BYD CAN communication line PIN1/2 corresponds to inverter CAN communication line PIN4/5.
- \*2. HVS batteries combined with ET15~30K series cannot reach the maximum charging and discharging power of the inverter.

<b>Battery Brand</b>	<b>Battery Series</b>	Battery Model	ET (5-10kW)*	EH	ВТ	ВН	EHB	ET (15-30kW)	ET-20
	FLEX 8.6	•							
	RESU FLEX Series*1	FLEX 12.9	•						
1.0		FLEX 17.2	•						
RESU Type-R Series  RESU Prime Series 2	RESU Type-R Series	RESU10H_Type-R					•		
	DESII Drimo Sorios*2	RESU10H Prime					•		
	RESU16H Prime					•			

<sup>\*.</sup> Including ET Series: ET PLUS+, ET PLUS+ (16A)

### ET/EH/BT/BH/EHB:

- \*1. Only compatible with ET PLUS+ Series. ARM firmware versions 23 and above are required for compatibility.
- \*2. ARM firmware versions 20 and above and DSP versions 02 and above are required for compatibility.



## 2) High-voltage Energy Storage Systems

Battery	Battery	Battery	Inverter Series				
Brand	Series	Model	ET (5-10kW)*	EH	ВТ	вн	ET-20
PYLON	Powercube H1 Series*1	POWERCUBE-H1-48	•	•	•	•	
	Force H1 Series*2	Force-H1	•	•	•	•	•
	Force H2 Series*2	Force-H2	•	•	•	•	
	Force H3 Series	Force-H3					•

<sup>\*.</sup> Including ET Series: ET PLUS+, ET PLUS+ (16A)

ET/EH/BT/BH/EHB:

<sup>\*2.</sup> ARM firmware versions 14 and above are required for compatibility. Please note that the nominal voltage of FORCE-H1 Series must be within the Battery Voltage Range of GoodWe inverters. At least 5 FORCE-H1 battery modules for ET.

<b>Battery Brand</b>	Battery Series	Battery Model	ET (5-10kW)*	EH	ВТ	ВН	ET-20
DYNESS	Tower Series <sup>*1</sup>	Tower T7		•		•	
		Tower T10	•	•	•	•	
		Tower T14	•	•	•	•	
		Tower T17	•		•		

<sup>\*.</sup> Including ET Series: ET PLUS+, ET PLUS+ (16A) ET/EH/BT/BH/EHB:

<sup>\*1.</sup> ARM firmware versions 10 and above are required for compatibility.

<b>Battery Brand</b>	Battery Series	Battery Model	ET (5-10kW)*	EH	BT	ВН	ET-20
Soluna	HV Battery Series <sup>*1</sup>	Soluna 7K Pack HV		•		•	
		Soluna 10K Pack HV	•	•	•	•	
		Soluna 15K Pack HV	•		•		

<sup>\*.</sup> Including ET Series: ET PLUS+, ET PLUS+ (16A)

ET/EH/BT/BH/EHB:

ARM firmware versions 10 and above are required for compatibility.

1. At the little versions to and above are required for compatibility.								
<b>Battery Bra</b>	nd Battery Series	Battery Model	ET (5-10kW)*	EH	ВТ	ВН	ET-20	
iPotisEdge		Mint-JKE5		•		•		
	e Mint-JKE <sup>*1</sup>	Mint-JKE10		•		•		
	e Willit-JKE	Mint-JKE15	•	•	•	•		
		Mint-JKE20	•	•	•	•		

<sup>\*.</sup> Including ET Series: ET PLUS+, ET PLUS+ (16A) ET/EH/BT/BH/EHB:

<sup>\*1.</sup> ARM firmware versions 12 and above are required for compatibility.

<b>Battery Brand</b>	Battery Series	Battery Model	ET (5-10kW)*	EH	ВТ	ВН	ET-20
	WTS Power-CORE	WTS Power-CORE 1.0-5.5					
		WTS Power-CORE 1.0-8.3	•		•		
		WTS Power-CORE 1.0-11.0	•		•		
		WTS Power-CORE 1.0-13.8	•		•		
wts	WTS Energy-CORE	WTS Energy-CORE 1.0-9.6					
VVIS		WTS Energy-CORE 1.0-12.8	•		•		
		WTS Energy-CORE 1.0-16.0	•		•		
		WTS Energy-CORE 1.0-19.2	•		•		
		WTS Energy-CORE 1.0-22.4	•		•		
		WTS Energy-CORE 1.0-25.6	•		•		
ET/RT·							

## 3) Commercial and Industrial Energy Storage Systems

Bottom, Brand	Dattom: Comica	Dattam: Madal	Inverter Series		
Battery Brand	Battery Series	Battery Model	ETC	ВТС	
	Lynx C series <sup>*1</sup>	LX C 101-10	•	•	
GOODWE		LX C 120-10	•	•	
GOODWE		LX C 138-10	•	•	
		LX C 156-10	•	•	

### ETC 50K/BTC 50K:

<sup>\*1.</sup> ARM firmware versions 07 and above are required for compatibility. Please note that the nominal voltage of POWERCUBE-H1-48 Series must be within the Battery Voltage Range of GoodWe inverters. Maximum 8 units for EH/BH, and 11 units for ET/BT.

ET/BT:

\*1. ARM firmware versions 14 and above are required for compatibility.

<sup>\*1:</sup> EMS firmware versions 02 and above are required for compatibility.

<sup>\*1.</sup> EMS firmware versions 00 and above are required for compatibility.