


The 3-phase Hybrid

SH5.0RT / SH6.0RT / SH8.0RT / SH10RT


**INSTALLATION & COMMISSIONING
WITH LG | BYD BATTERY**

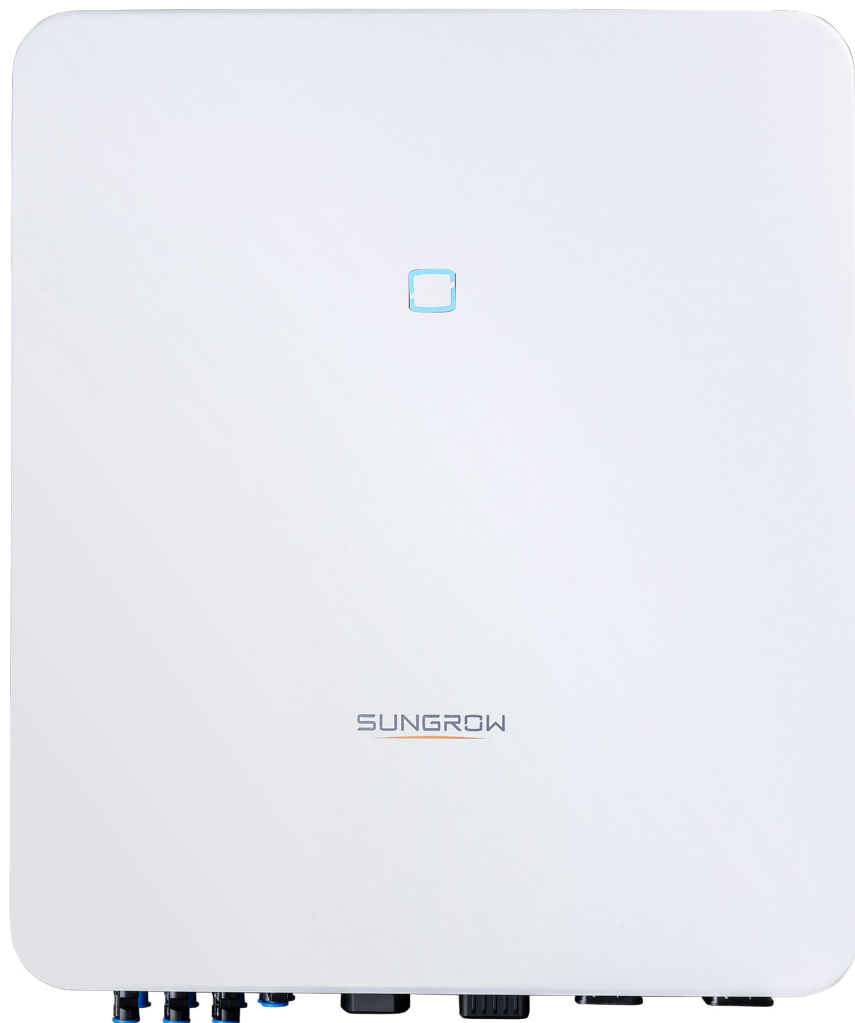




INSTALLATION & COMMISSIONING WITH LG BATTERY


1 OPEN BATTERY

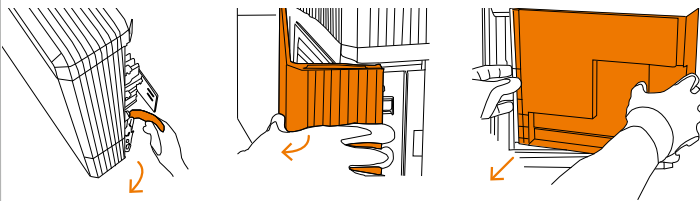


2 CONNECT POWER CABLES

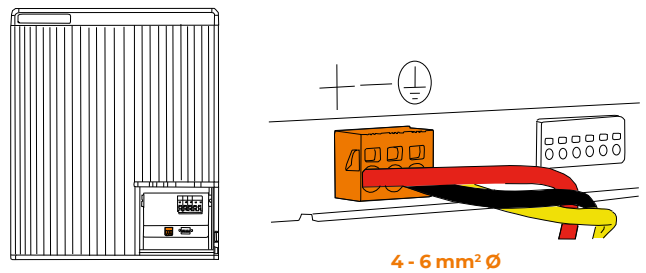


3 CHECK CABLE POLARITY

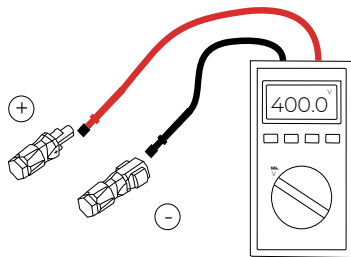


4 ASSEMBLE SUNCLIX CONNECTOR

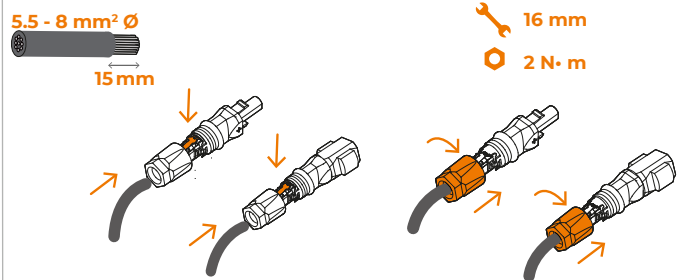


5 CONNECT INVERTER

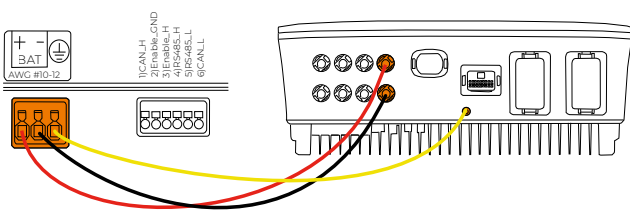


6 ATTACH COMMUNICATION CABLES

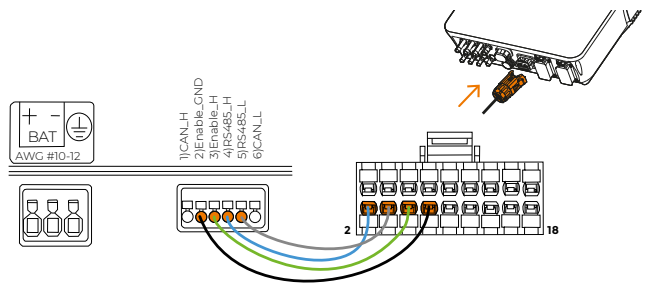

7 SWITCH ON BATTERY

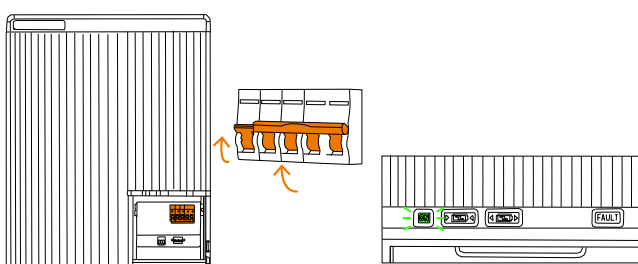


8 OPEN iSolarCloud

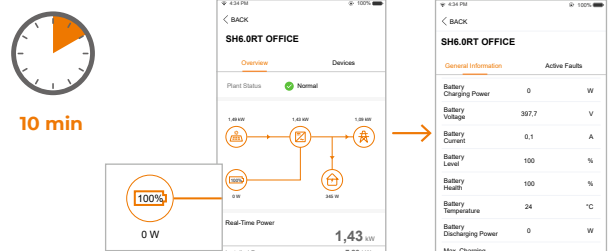




INSTALLATION & COMMISSIONING WITH BYD BATTERY


1 CONNECT POWER CABLES

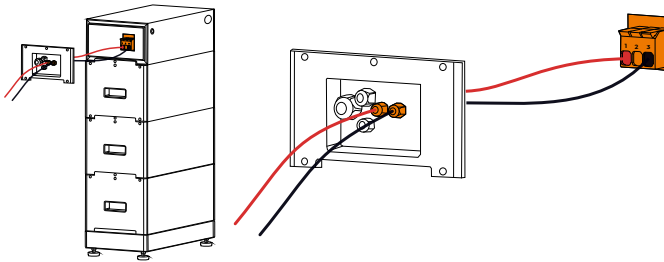


2 SECURE GROUNDING CONNECTION

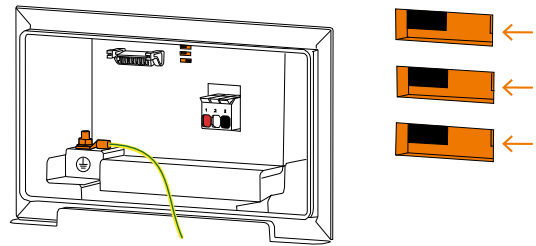


3 CHECK CABLE POLARITY

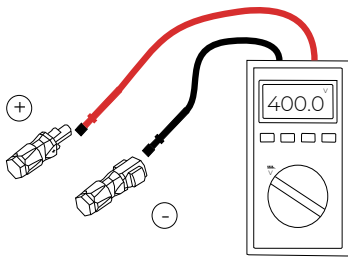


4 ASSEMBLE SUNCLIX CONNECTOR

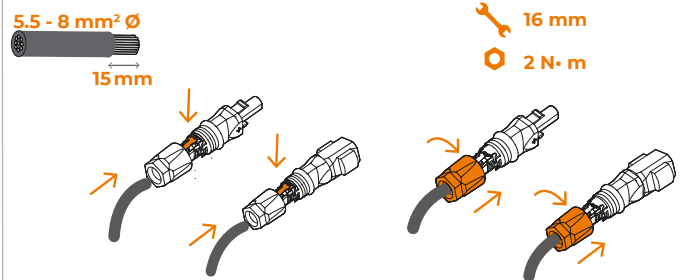


5 ATTACH COMMUNICATION CABLES

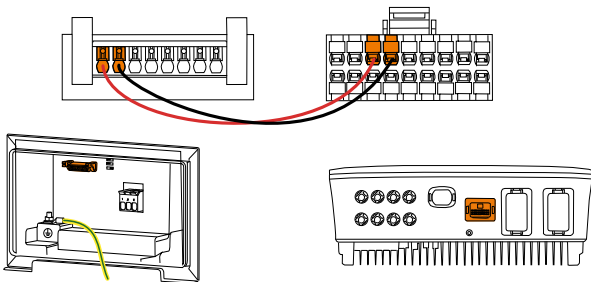

6 SWITCH ON BATTERY

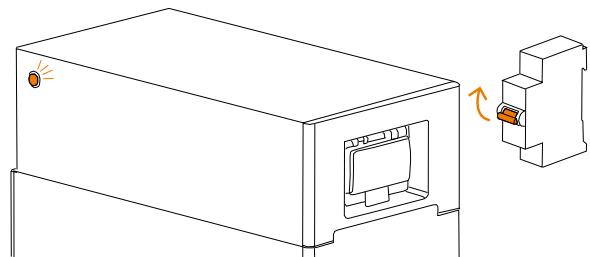

7 SET UP BYD Be Connect

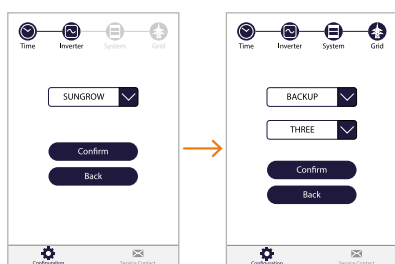

8 OPEN iSolarCloud

